

Resetting Internal Print Servers


[Phase 1] Print Server Reset




Turn the printer off.



 
Press the status button of the print server and keep it pressed.



Turn the printer on.

 

 Wait until the Activity- and Status-LED start blinking simultaneously.
The Reset Mode is activate.



Release the status button for about 2 seconds.

The LEDs blink alternatingly.

 


Press the status button once again and keep it pressed.

The LEDs blink simultaneously.



After few seconds only the Activity-LED blinks consistently.




Release the status button.

[Phase 2] Device Restart




 Turn the printer off.



Turn the printer on.

 [Phase 3] Status Check



Press the status button for a short time.